


FinePix S5200/FinePix S5600

Quick start



FUJIFILM digital


Camera Controls

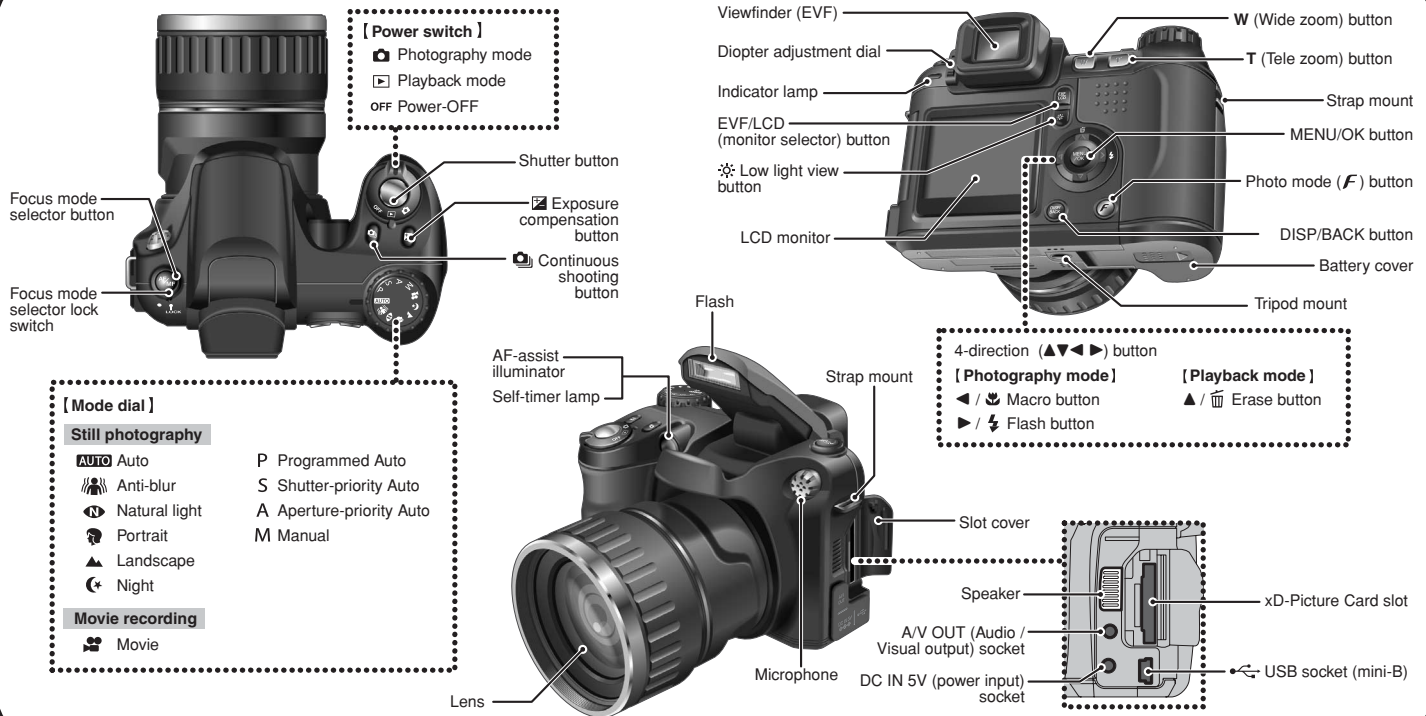


BL00485-200(1) E

Picture Taking

A. Loading the batteries

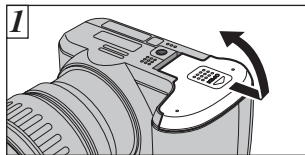


1. Check that the camera is turned off (set the Power switch to "OFF") before opening the battery cover.

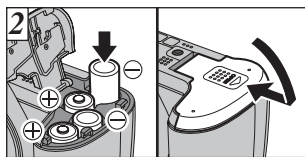


2. Load the batteries correctly as indicated by the polarity icons. Press on the battery cover to push the batteries down. Slide the battery cover closed.

B. Setting up the camera

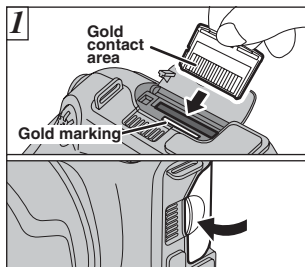


1. Align the gold marking on the xD-Picture Card slot with the gold contact area on the **xD-Picture Card™** and push the card firmly all the way into the slot. Close the slot cover.

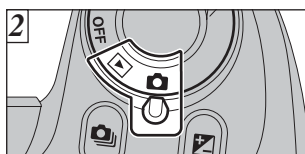


2. To turn the camera on, set the Power switch to "CAM" or "PLAY". Press the "MENU/OK" button to set the date and time.

Refer to Owner's Manual for more detailed instructions

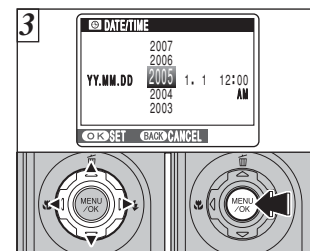


3. You can select your preferred date format. Press "◀" or "▶" to select the date format, Year, Month, Day, Hour or Minute. Press "▲" or "▼" to correct the setting. Press the "MENU/OK" button after you complete the setting. *Refer to owner's manual for date/time setup.

C. Taking pictures

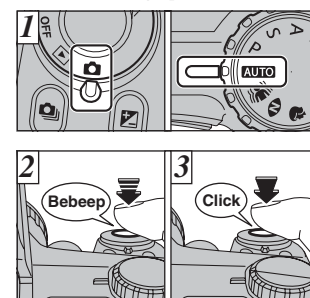

1. Set the Power switch to "CAM" and set the Mode dial to "AUTO".
2. Press the shutter button down halfway to adjust the focus.
3. Press the shutter button down fully to take a picture. The camera makes a "Click" sound and takes the picture.

D. Viewing picture

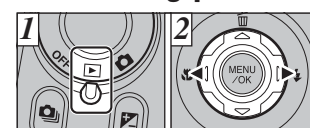

1. Set the Power switch to "PLAY".
2. Press "◀" or "▶" to move through your images.


Still images that can be viewed on the FinePix S5200/FinePix S5600

You can use this camera to view still images recorded on the FinePix S5200 / FinePix S5600 or still images (excluding some uncompressed images) recorded on a FUJIFILM digital camera that supports **xD-Picture Card**.

Viewing images on your PC



A. Install Software

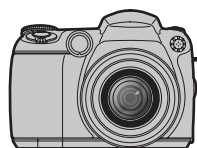

B. Connect a Camera to PC

C. Save Images



A. Install Software

Do not connect the camera to your PC until the software installation is completed.

1. Turn on your PC and start up Windows.

Users of Windows 2000 Professional or Windows XP should log in by using a system administrator account (e.g. "Administrator").

2. Quit all other active applications until no applications are shown in the taskbar.

3. Load the enclosed CD-ROM into the CD-ROM drive. The installer starts up automatically.

4. The Setup screen appears. Click the [Installing FinePixViewer] button.




5. After installation completed, press [Close] button.

B. Connect the Camera to your PC

1. Load an **xD-Picture Card** containing photographed images into your camera.

2. Set the Power switch to "ON" to turn the camera on. Select "DSC" in "SET" USB MODE in the "SET" SET-UP menu (Refer to "USING THE SET-UP SCREEN" in the owner's manual).

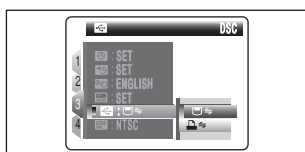


3. Turn your camera off.

4. If you have one, plug the AC power adapter connector into the "DC IN 5V" socket on the camera and then plug the adapter itself into the main power outlet, otherwise be sure your batteries are fresh and charged.

5. Turn your PC on.

6. Connect the camera to the PC using the USB cable (mini-B).

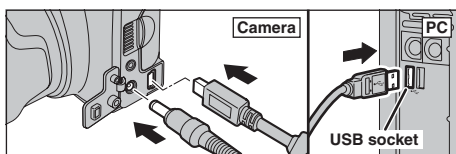

7. Set the Power switch to "ON".



8. Windows 98/98 SE/Me/2000 Professional

FinePixViewer starts up automatically.

Windows XP

The "Found New Hardware" help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required. FinePixViewer starts up automatically.



C. Save Images

1. The Save Image Wizard starts up. Click the [Start] button.
2. Check that the files are downloaded from the camera to your PC and that a folder with the date is created.

Ex. \My Documents \ My Pictures \ 2005_0824

D. View Images

1. Click the [Show List of Images] button.



2. Select "Preview" in the View menu to display an enlarged image.

For more information

Refer to "How to use FinePixViewer" in the HELP menu, or chapter 5 and 6 in the Owner's Manual, or visit Fujifilm "Q&A Search" in the following website.

(<http://home.fujifilm.com/products/digital/>)

For Macintosh users, refer to chapter 5 and 6 in the Owner's Manual.